
Yealink

USB Camera

UVC30 Room

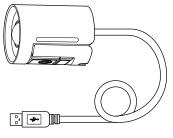

English | 简体中文

Quick Start Guide(V1.1)

Package Contents



UVC30 Room



Camera Lens Privacy Cover




We recommend that you use the accessories provided or approved by Yealink. The use of unapproved third-party accessories may result in poor performance.

UVC30 Room Installation


. Mount on top of a TV

Choose the following installation method when the thickness of the TV is between 1mm and 50mm.

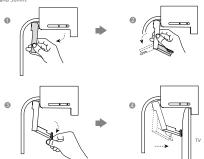


· Mount onto a TV Stand or a Tripod

You need to purchase a TV stand or a tripod separately.



Mount on a Wall

You can purchase a bracket provided by Yealink to mount UVC30 Room on a wall.

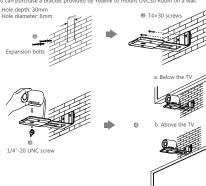

If you choose a third-party bracket, you need to purchase a bracket which comes with a standard VESA lock.

LED Indicator Instructions

LED indicators on the UVC30 Room:

LED Status	Description
Off	The UVC30 Room is not properly connected to the mini-PC or the UVC30 Room is inactive.
Flashing green	There is an incoming call in the Skype for Business/Teams meeting.
Solid green	The UVC30 Room is active.
Flashing orange	The UVC30 Room is upgrading firmware.
Flashing red	The UVC30 Room is in recovery mode and the firmware has not been upgraded.

包装清单



UVC30 Room



镜头盖




UVC30 Room 快速入门指南

我们推荐使用由Yealink提供或经Yealink认可的配件和线缆,使用未经认可的第三方配件和线缆可能会导致性能的下降。

安装UVC30 Room


挂装

1至40
当电视厚度范围为1mm-50mm时,进行以下步骤:

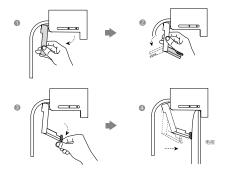


• 电视架或三脚架安装

你可以将UVC30 Room安装在自行选购的电视架或三脚架上。



墙装

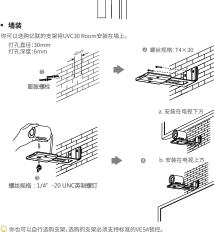

指示灯介绍

UVC30 Room指示灯介绍如下:

指示灯状态	说明
灭	UVC30 Room 没有正确连接到 mini-PC 上或未处于正常工作状态。
绿灯闪烁	来电中状态。
绿灯常亮	UVC30 Room 处于正常工作状态。
橙灯闪烁	UVC30 Room 固件更新中。
红灯闪烁	UVC30 Room 进入恢复模式,还未固件更新。

Regulatory Notices

Operating Ambient Temperatures Operating temperature: +32 to 104°F (0 to 40°C)

•Relative humidity: 5% to 90%, noncondensing

Warranty

We are not liable for damage or loss resulting from the use of this prod Yealink device arising from the use of this product; we are not liable for

Explanation of the symbols

DC symbol

is the DC voltage symbol.

· WEEE Warning symbol To avoid the potential effects on the environment and human health To avoid the potential effects on the environment and human health as a result of the presence of hazardous substances in electrical and electronic equipment, end users of electrical and electronic

equipment should understand the meaning of the crossed-out wheeled bin symbol. Do not dispose of WEEE as unsorted municipal waste and have to Restriction of Hazardous Substances Directive (RoHS)

Statements of compliance can be obtained by contacting support@vealink.com. Safety Instructions

Save these instructions. Read these safety instructions before us A General Requirements

- . Before you install and use the device, read the safety instructions
- . During the process of storage, transportation, and operation, please . Please attempt not to dismantle the device by yourself. In case of any

Legal rights of others should be respected as well. ▲ Environmental Requirements

- under direct sunlight. Keep the device dry and free of dusts
- Do not place the device on or near any inflammable or fire-vulnerable Keep the device away from any heat source or bare fire, such as a candle
- ⚠ Operating Requirements
 - . Do not let a child operate the device without guidance accidental swallowing.
 - Please use the accessories provided or authorized by the manufactur The power supply of the device shall meet the requirements of the inc.
 - . Before plupping or unplupping any cable, make sure that your hands are Do not spill liquid of any kind on the product or use the equipment r water, for example, near a bathtub, washbowl, kitchen sink, wet
 - basement or near a swimming gool During a thunderstorm, stop using the device and disconnect it from the Subscriber Line (ADSL) twisted pair (the radio frequency cable) to avo

lightning strike. About Yealink

Yealink is a global leading provider of enterprise communication and collaboration solutions, offering video conferencing service to worldwide enterprises. Focusing on research and development, Yealink also insists on innovation and creation. With the outstanding technical patents of cloud computing, audio, video and image processing technology. Yealink has built up a panoramic collaborati solution of audio and video conferencing by merging its cloud services with a series of endpoints products. As one of the best providers in more than 140 countries and regions including the US, the UK and Australia, Yealink ranks No.1 in the global market share of SIP phones shipments

Technical Support

Visit Yealink WIKI (http://support.yealink.com/) for the latest firmware, quides, FAQ, Product documents, and more. For better service, we sincerely recommend you to use Yealink Ticketing system (https://ticket.yealink.com) to submit all your technical issues.

• If the device is left unused for a rather long time, disconnect it from the When there is smoke emitted from the device, or some abnorm or smell, disconnect the device from the power supply, and unplug the

- Contact the specified maintenance center for repair . Do not insert any object into equipment slots that is not part of the
- . Before connecting a cable, connect the grounding cable of the device first. Do not disconnect the grounding cable until you disconnect all other
- A Cleaning Requirements · Before cleaning the device, disconnect it from the power supply. . Use a piece of soft, dry and anti-static cloth to clean the device

 Keep the power plug clean and dry. Troubleshooting The unit cannot supply power to device other than Yealink device

1. Clean the plug with a dry doth The usage environment is out of operating temperature range

ne cable between the unit and the Yealink device is connected incorrectly. 1. Connect the cable correctly.

You may have connected a wrong Yealink device Some dust, etc., may be in the port

tact your dealer or authorized service facility for any further questi This device complies with part 15 of the FCC Rules. Operation is subject to the

two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may Any Changes or modifications not expressly approved by the party responsible

IC Statement subject to the following two conditions:

(1) this device may not cause interference; and (2) this device must accept any interference, includ Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux

(1) l'appareil ne doit pas produire de brouillage; (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectr même si le brouillage est susceptible d'en compromettre le

Contact Information

ree Street Suite 2300, Fulton, Atlanta, GA, 30309, USA



Web: www.yealink.com Copyright ©2019 YEALINK(XIAMEN) NETWORK

TECHNOLOGY CO.,LTD.All rights reserved.

